

Boss / Steel-Line HT4 Genuine Garage Door Remote Control Programming Instructions For Wall-Mounted Motors

For Wall-Mounted Motors

1. Carefully remove the faceplate from your wall-mounted motor control panel. At the bottom centre of the grey cover, you'll find a small slot designed for a flathead screwdriver—insert and gently lift to release the cover.
2. Inside, locate the Radio Learn/Code Set button (shown in the diagram below as the small black button inside the red circle) and press it once. The indicator light will change from red to amber/yellow.
3. On your new remote, press the button you'd like to use to operate the door once, then release. The green light on the motor panel will flash rapidly to confirm the code has been programmed.
4. Press the Learn/Code Set button once more. The amber/yellow light will switch off, and the red light will return.
5. Test your new remote to ensure it operates the door correctly. Finally, reattach the faceplate to the control panel.

For Ceiling-Mounted Motors

1. Locate the Radio Set/Code Set button on the rear of your motor.
2. Press the button once and release immediately. A light will turn on, indicating the motor is ready to program a new remote.
3. On your new remote, press the button you want to use once, then release. The motor's learning light will blink to confirm successful programming.
4. Test the remote to ensure it is working properly.

⚠ Important Safety Warning

This product may contain a coin/button cell battery. Keep remotes and batteries out of reach of children. If swallowed or inserted, button batteries can cause serious or fatal injury within just two hours. Seek urgent medical attention if ingestion or insertion is suspected.